

Kid Carrier



Playing Instructions

1. Insert coin(s).
2. Game starts and game time starts to countdown.
3. Aim to shoot the enemy vessels. The more vessels you shoot, the more point you will get.
4. Game is over when game time is 0.
5. There are several buttons inside the game: SERVICE, TEST, SELECT, CHANGE. Please refer to the display on screen to set the game.
6. Directional controller reset: enter potentiometer testing menu, first, press the start button, then rotate the directional controller left and right for twice, after that, press the exit button or restart the machine.

Game Settings:

1. No. of coin (1 – 10 coins) for no. of game (1 – 5 games)
2. No. of point (1 – 50 tickets) for no. of ticket (1 – 5 tickets)
3. Game time (60 – 300 seconds)
4. Dispense tickets or not. (ON – dispense, OFF – do not dispense)
5. Language (Chinese or English)
6. Mercy ticket (0 – 5 tickets)
7. Game mode (insert coin or free play)
8. Volume (value: 50 – 255)
9. Directional controller reset: enter potentiometer testing menu, first, press the start button, then rotate the directional controller left and right for twice, after that, press the exit button or restart the machine.

Component side:

1	R	
2	B	
3		SPEAKER OUT speaker
4	S0	COIN SWITCH (1)
5	S1	COIN SWITCH (2)
6	S2	SERVICE
7	S18	TEST / page turning
8	S3	SELECT
9	S4	CHANGE
10	S17	Ticker dispenser feedback signal---spare
11	S5	START BUTTON
12	S6	LAUNCH BUTTON
13	S7	
14	S19	
15	S20	
16	S16	
17	S21	
18	S11	
19	S10	
20	S15	Direction—left switch
21	S12	Direction—right switch
22	GND	
23	O0	Ticker dispenser signal---spare
24	O4	Ticker indicator light---spare
25	O1	COIN METER
26	O2	Ticket meter---spare
27	O3	Speaker light 1
28	O5	Speaker light 2
29	O12	Speaker light 3
30	O14	Speaker light 4
31	O16	Launch button light
32	O18	Launch solenoid
33	O20	Vibrating horn under seat
34	O22	Start button light
35	GND	
36	GND	

Solder side:

1	G	
2	SYNC	
3	GND	SPEAKER OUT speaker GND
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17	S22	
18	S13	
19	S9	
20	S31	
21	S14	
22	S30	
23	S23	
24	O6	
25	O8	
26	O9	
27	O10	
28	O11	Taillight 1
29	O13	Taillight 2
30	O15	Main air valve switch
31	O17	Air valve—front left
32	O19	Air valve—front right
33	O21	Air valve—rear left
34	O23	Air valve—rear right
35	GND	
36	GND	

Component side	Solder side		
GND	1	1	GND
GND	2	2	GND
+5V	3	3	+5V
+5V	4	4	+5V
+12V	5	5	+12V
+12V	6	6	+12V
O27	7	7	O26
	8	8	
GND	9	9	GND
GND	10	10	GND