


In order to prevent the variety of problems which caused by incorrect operation, Please read the manual first before operating this machine and pay attention to the items marked in “note”.

Please keep this manual carefully for checking when needed.

Summary

- ✧ Transportation, installation, safe operation of moving and operating methods and attentions;
- ✧ Installation and operation;
- ✧ Function adjustment;
- ✧ Maintenance;
- ✧ General troubleshooting and solutions;
- ✧ Main components diagram;
- ✧ Circuit connection diagram.

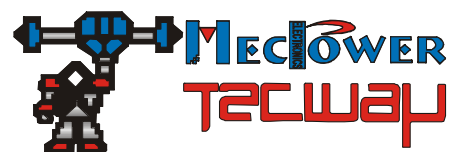





Safety Attentions

- 1) Certain part of the game is with high voltage. Adjust the game by technician. Do not open the game door unless maintenance or parts replacement is required.
- 2) Please switch off the power before checking and maintenance.
- 3) Please switch off the power before opening the game door.
- 4) Fire extinguisher equipment must be nearby the game.

Installation

The game must be located properly to avoid damages.

Improper Locations:

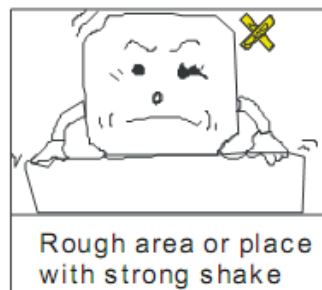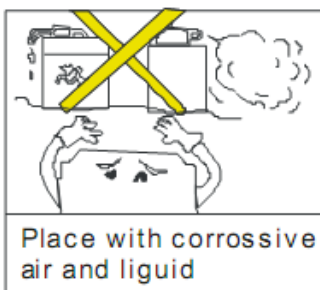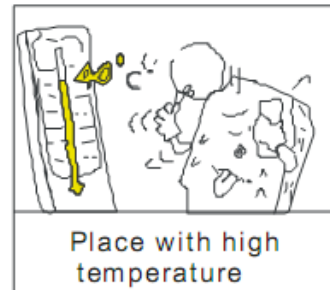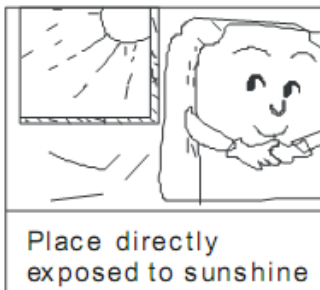

Notes of Usage

- 1) The voltage range of the game should be 105V~115V or 215V~225V.
The proper voltage should be 110V/220V. The specific voltage accords to the date plate on the back door of the game. The voltage must be correct; otherwise it would be difficult to repair the damage.
- 2) The plug must be plugged in tightly and keep the power cords not be too tight and damaged in order to prevent bodily injury, short-circuit and power leakage.
- 3) To put the machine to normal operating, please properly adjust the coin match and the game settings when use at the first time.
- 4) Please regularly check all the functions of the game when operate to prevent dysfunction.

Notes of Maintenance

- 1) Be sure to check and maintance the game regularly.
 - 2) Switch off the power before replacing the parts of the game.
 - 3) The parts for replacement should be the same model as the old one.
 - 4) Please check the connection and voltage output after replacing the power supply.
 - 5) The voltage range of the PCB should be 5.1V-5.4V.
- 1) Check whether the game has creepage and the voltage before repairing the PCB.

Notes of Clean

- 1) Please use clean and soft cloth to clean the game.
- 2) Prevent damaging the surface of the game, please do not use the following cleanser:
 - Alterative Cleanser;
 - Acidic Cleanser;
 - Insecticide, sterilized water, alcohol or other chemical cleanser.

Notes of Moving and Shipping


- 1) Properly disassemble the game for necessary moving and shipping.
- 2) Prevent the game from hitting or being attrite during movement.
- 3) Protecting the case when move the game.

CONTENT

1.	GAME INTRODUCTION	6
2.	PLAYING TIPS AND OPERATIONS.....	7
3.	TECHNICAL PARAMETER	8
4.	MOVEMENT.....	9
5.	INSTALLATION.....	10
5.1	CHOOSE THE LOCATION FOR INSTALLATION	10
5.2	CHECK AND SET BEFORE CONNECTING THE POWER	11
5.3	CHECK AND ADJUST AFTER CONNECTING THE POWER.....	12
6.	CHECK BEFORE OPERATION.....	12
7.	DAILY OPERATION	13
7.1	INPUT POWER TO OPERATE	13
7.2	CHECK AFTER OPERATION.....	13
7.3	COLLECT COINS AND KEEP RECORD	13
8.	GAME SETTING	14
8.1	KEYS FOR SETTING	14
8.2	SETTING METHOD.....	15
8.3	SETTING DESCRIPTION.....	15
9.	ADJUSTMENT	16
9.1	ADJUT THE COIN MECH.....	16
9.2	MAIN BOARD ADJUSTMENT	17
10.	CHECK AND MAINTAIN	18
10.1	DAILY CHECK.....	18
10.2	DAILY MAINTENANCE	18
11.	TROUBLESHOOTING	19
12.	DIAGRAM FOR MAIN PARTS AND PARTS LIST.....	20
12.1	CABINET.....	20
12.2	STEERING WHEEL	21
12.3	CIRCUIT BOARD	22
12.4	CHASSIS	23
13.	SCHEMATIC DIAGRAM	24

1. GAME INTRODUCTION

Rally Car with unique, beautiful, comic and simulation car appearance, interesting and exciting game, it is specially designed and developed by our company for the young people. It will be very essential and popular in amusement center.

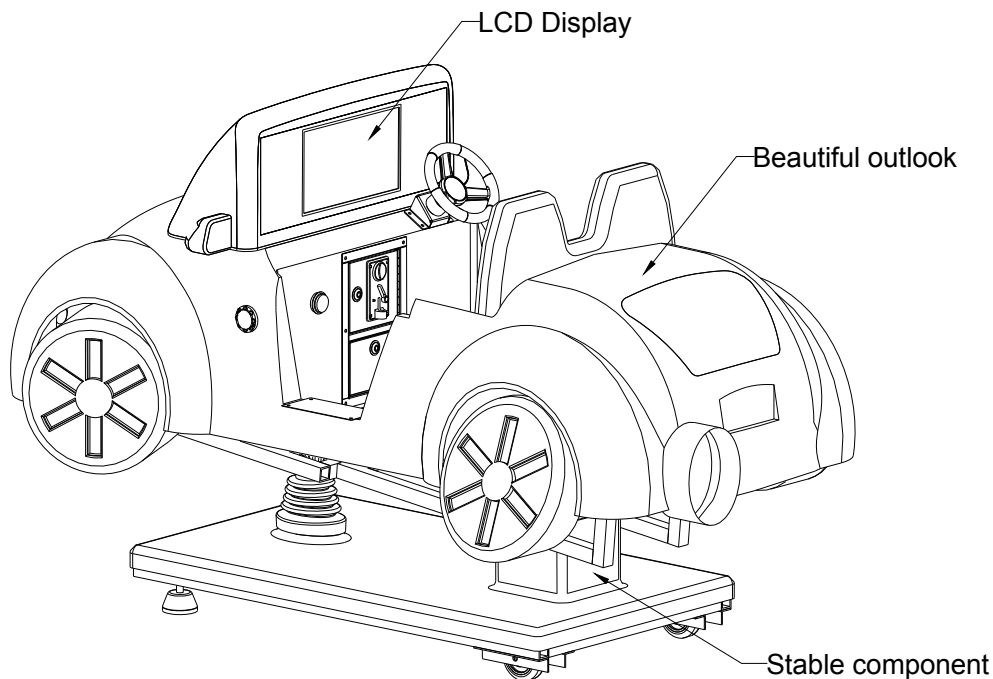

Features:

Realistic, colorful, cutty and simulation car appearance.

Integrated main board, high-speed processing CPU, stable performance.

High definition, high-quality LCD display.


Coin mech with high quality fits for various coins.

Simple, stimulating, strong operational sense and full of entertaining.

Operating income can be adjusted according to the situation.

2. PLAYING TIPS

Ride on the Rally Car and insert coin, press the start button to start the game. After that, the car will move, step on the accelerator to accelerate the car. When there's a sharp, step on the accelerator to control the speed. Avoid the barrier will drive faster. The more gifts you collected, the high score you got.

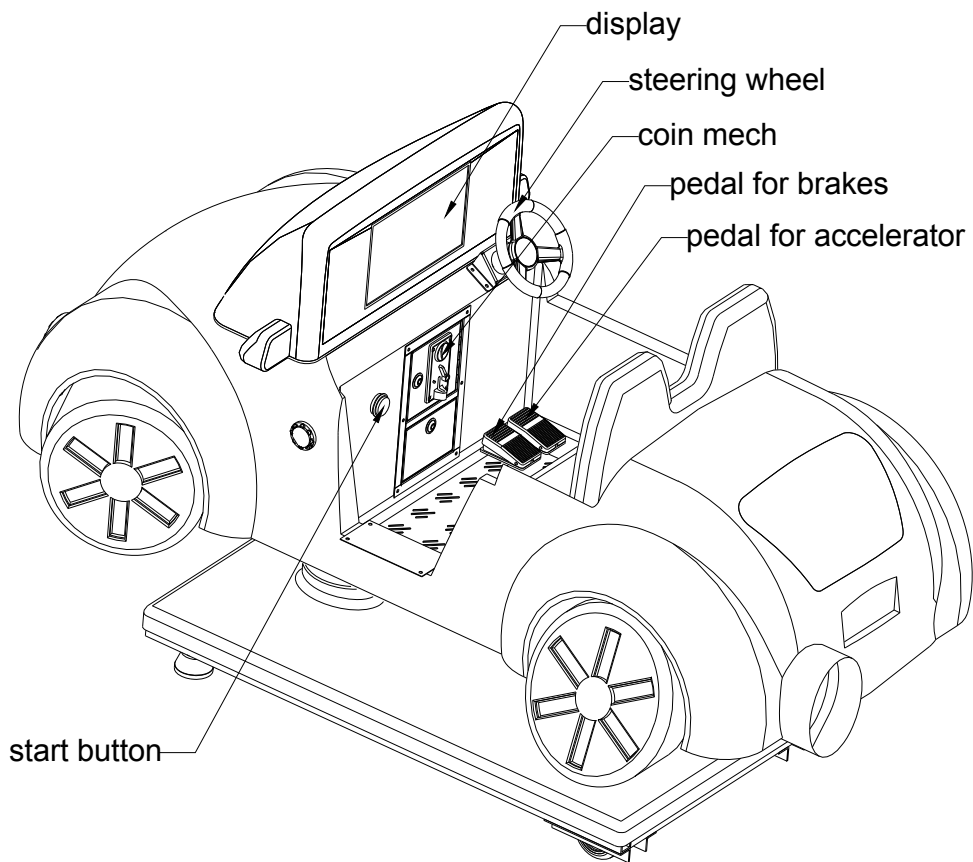

3. TECHNICAL PARAMETER

VOLTAGE: AC220V/110V (50/60HZ)

MAX. CURRENT: 1.2A/2.4A

(Note: please refer to the nameplate located on the back of the games to check actual usage of voltage.)

MAX. POWER: 265W


COIN SIZE: ϕ 21mm ~ ϕ 30mm (diameter)

1.2mm ~ 2.5mm (thickness)






CAPACITY OF COIN BOX: 1200pcs of coins with coin size ϕ 25mm*1.5mm

LOCATION REQUIRED: -5 ~ 40°C, humidity is less than 90%. No contact with any corrosive liquid, no any greasiness and dirt.

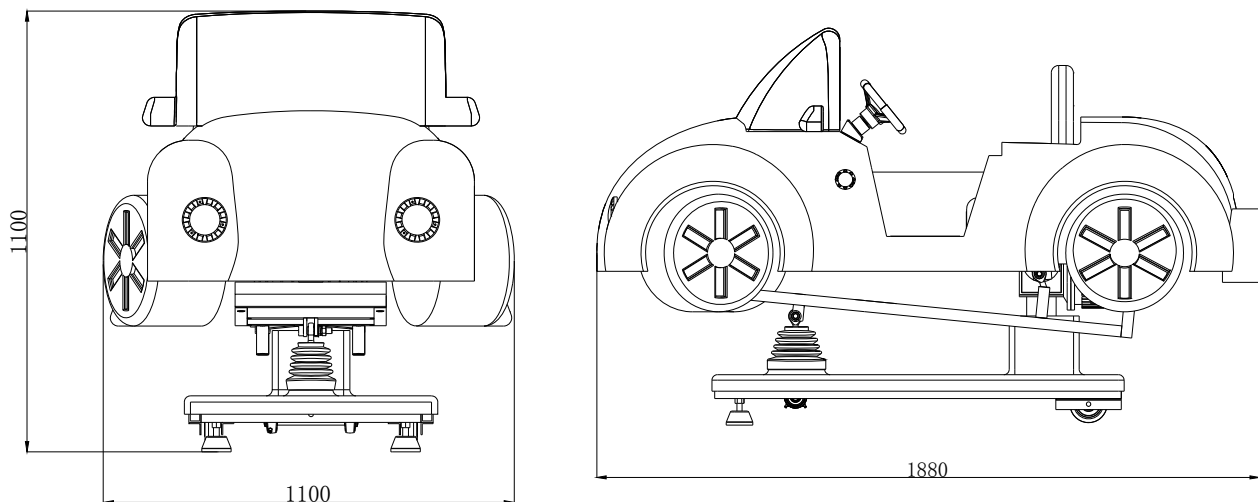DIMENSIONS: L1880mm*1100mm*H1100mm

 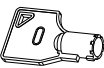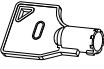


Parts shipped with the game:

NO.	DRAWING	NAME	SPEC./MODEL	QTY
1		LED	DC12V	3
2		key	1285 #	2
3		key	1396 #	2
4		power cord		1
5		manual		1

4. MOVEMENT

Direction of movement diagram:

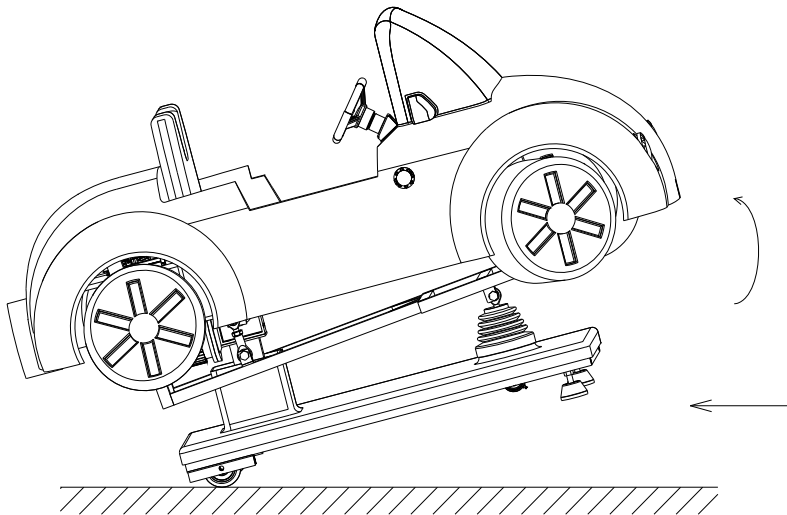

Note: when the road surface is uneven during moving or when you tilt the machine, please pay attention to the strength to prevent damage to any parts.

WARNING


- Please power off the game first and pull out the cord, then move the game.
- Please do not carefully move, turnover, transport the game; otherwise it will destroy the game.
- Prevent hitting, rubbing the games when move the games, otherwise it will damage the appearance of the game.

5. INSTALLATION

Please follow the direction below to install the game.

5.1 CHOOSE THE LOCATION FOR INSTALLATION

- 1) Put the Rally Car in the same type of Kiddie Ride with monitor then select the concrete placement machine according to the machine's exterior.
- 2) Choose the proper location for installation, please follow the below drawing to install.

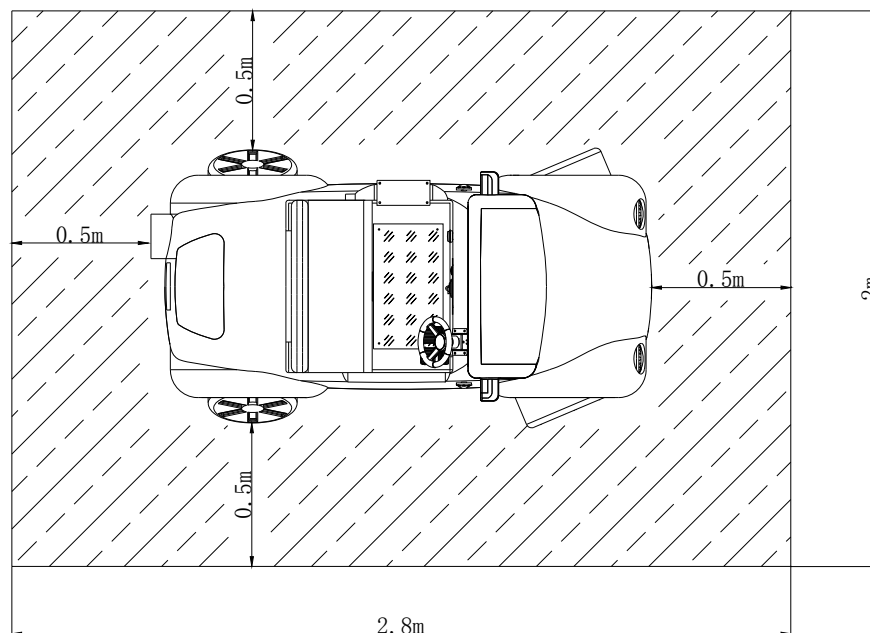

NOTE: It must be placed on the flat floor to make the machine on the ground steadily.



5.2 CHECK AND SET BEFORE CONNECTING THE POWER

- 1) Please check whether the parts of cabinet are loose caused by moving, and the wire terminal should not drop out from the port.
- 2) Check whether the GND is connected.
- 3) Please check whether the resistance of power input at the both ends for GND is more than 100 megohm.
- 4) Adjust the coin machine and check if it can work properly.
- 5) Connect the wires.



Attention

A Please make sure the power cord is not pressed by wheel, foundation, etc. Otherwise, it will damage the wire to cause short circuit, even fire.

Do not use strong power to extend and wring the wires. Do not make the wire be near to the high temperature object. Properly put the wire to avoid any kicking or treading.

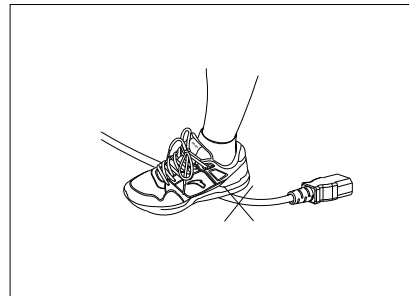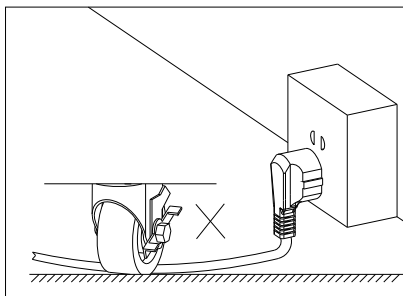

B Hold the plug to pull it out from the socket. Do not touch the plug with wet hands.

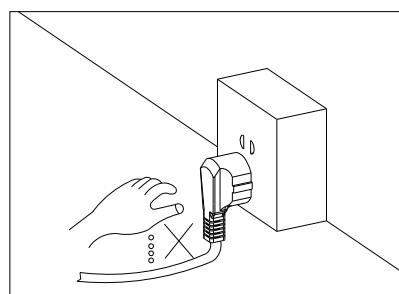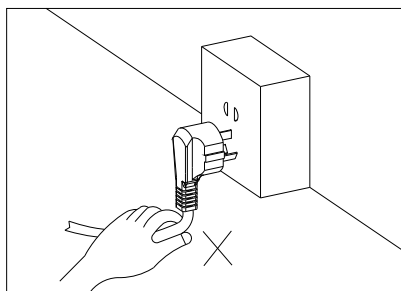

5.3 CHECK AND ADJUST AFTER CONNECTING THE POWER

- 1) Make sure the input voltage is same as the one stated on name plate on the back door of the game.
- 2) After connecting the power, please switch on the game.
- 3) Inserting coin to check if the coin machine cans work properly.
- 4) Visually check the game and confirm the display and light can work properly.
- 5) Enter into the setting program and set the game settings (include coin, game time, game levels, etc.)
- 6) Insert coin to play the game, confirm the operation of the direction and the machine movement is normal.
- 7) Check the sound if it is ok.

6. CHECK BEFORE OPERATION

Check the game before operation to prevent the game from working improperly when operated.

Checking item:

- 1) Check if the cord is securely plugged in and without defects.
- 2) Check the location of game.
- 3) Check if the game case is without defects or burrs.
- 4) Check if the game without dirt and properly stuck on with marks

7. DAILY OPERATION

7.1 INPUT POWER TO OPERATE

- 1) Turn on the machine power switch.
- 2) Visually check the game and confirm the display can work properly.
- 3) Check the sound if it is ok.
- 4) confirm the coin mech , operation of the direction and the machine movement is normal

Warning: Before operation, please confirm all the items above are ok.

7.2 CHECK AFTER OPERATION


- 1) Check the display of the game and confirm it is proper.
- 2) Double check the coin mech, operation of the direction and the machine movement is normal; If it has any problems, please solve the problem as soon as possible.

7.3 COLLECT COINS AND KEEP RECORD

- 1) Switch off the power and open the door of the coin box to take out the coins
- 2) Open the door of the coin mech to keep a record of the coins' quantity.

8. GAME SETTING

8.1 KEYS FOR SETTING

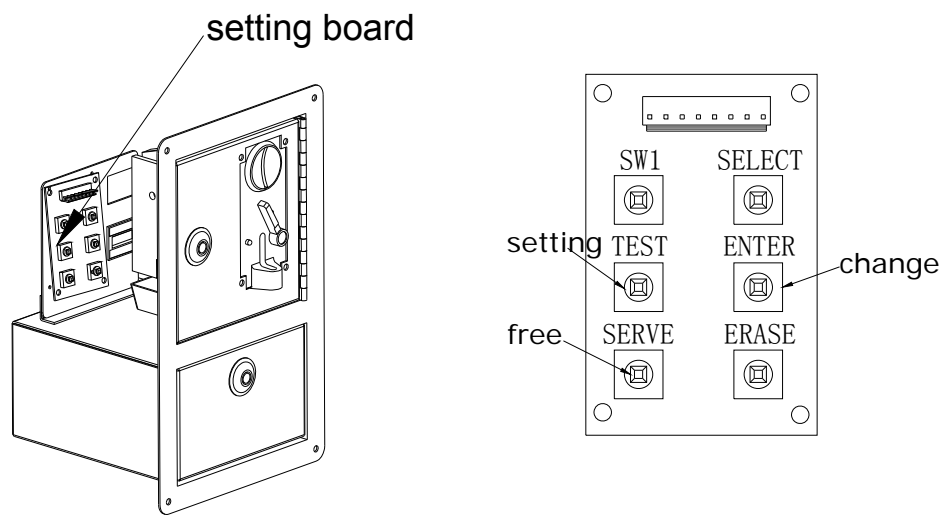

TEST: Enter into the setting menu or skip to the next menu.

ENTER: Change the setting.

SERVE: Free to play.

8.2 SETTING METHOD

Setting method: press “TEST” to enter into the game setting menu → press the “TEST” to choose the setting item →press “ENTER” to change the setting.

8.3 SETTING DESCRIPTION

1) Game setting interface:



Descriptions:

COIN: this setting can decide how many coins for how many playing time, if set to "1", it means insert 1 coins for 1 game.

VOLUME: this setting can decide the volume, the higher value, the larger output volume.

TIME: this setting decides the limit time for one game, if setting to "3:00", it means has 3 minutes for one game.


TEST: this setting is to test if the encoder of steering wheel is working properly. When you turn the steering wheel, the test values in a regularly changing.

LOGO: this setting decides if display the LOGO on the screen, if setting to "OFF", the screen will not display the LOGO when in standby.

EXIT: exit the setting.

9. ADJUSTMENT

9.1 ADJUST THE COIN MECH

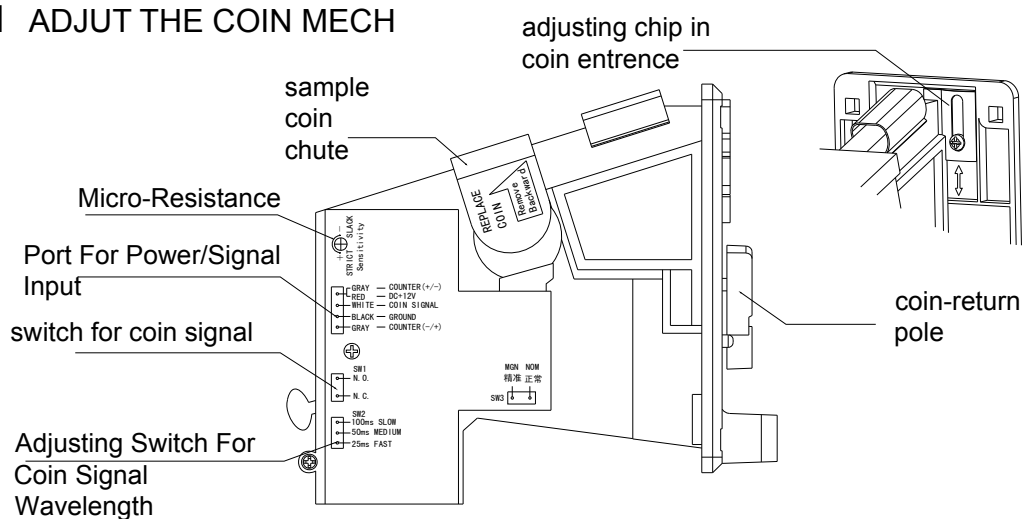


Descriptions:

- 1): Please take out the plastic coin from sample coin chute and replace it with token.
- 2): Remove the screws on back of coin entrance. Adjust the fixing chip on back of coin entrance according to the token's diameter, which prevent blocking the coin mech as inserting the large coin in by mistake.
- 3): Turn the COIN Switch to "NO" (COIN Signal wire and GND should be disconnected at usual time). Turning switch can be used as the coin mech switch when the game is power on.
- 4): Adjust the adjusting switch of COIN Signal wave length to 50MS.
- 5): Adjust the micro-adjusting resistance of token tolerance. Clockwise: increasing the sensitivity of token tolerance, that is, the range of accepting the token tolerance will be larger. Counter clockwise:

decrease the sensitivity, that is, the range will be smaller and choose the token more strictly.

9.2 MAIN BOARD ADJUSTMENT

Diagram of main board:

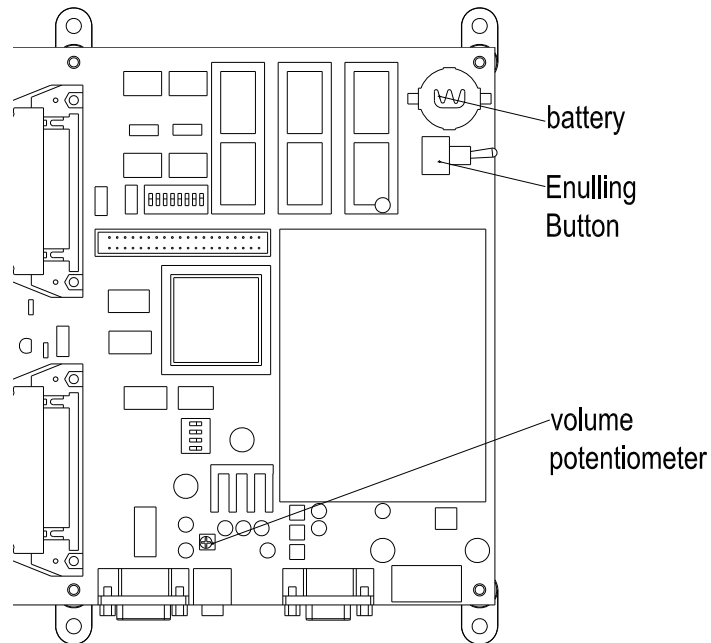

Descriptions:

Annuling Button: pressing this button can set the Game Setting to default and clear the data of Coin and Ticket saved in PCB.

Volume Adjustment: Use a flat screwdriver to twist the volume potentiometer to adjust the volume level of the machine. Turning clockwise will increase the volume; counterclockwise will decrease the volume.

! warning

The battery can save the data of game settings and coin number when the power off. Please replace the battery when the machine can not save the game setting.

10. CHECK AND MAINTAIN

! warning

Please check and maintain the game by technicians.

Please power off the game when check and maintain.

Please do not put any tools into cabinet, otherwise it will cause problem.

After checking, please tightly screw the screws and close the door.

10.1 Daily Check

ITEM	DESCRIPTION
Coin mech	Check whether the coin mech can work proper.
Encoder of the direction	Check whether the encoder of the direction can control the Rally Car's forward direction normally
Sound	Check whether the sound and the volume are ok.
Display	Check if the displayed colors are proper.
Temperature、humidity	Check if the temperature and humidity is proper

10.2 Daily Maintenance

ITEM	DESCRIPTION
Cabinet	Clean the cabinet with water and soft paper.
Monitor	Clean the ABS for monitor with water and soft paper.
PCB	Sweep the dust and dirty in the board with small brush


11. TROUBLESHOOTING

If you have any problem in installing or using the machine, we recommend that you first check the following table for possible cause of the problem and solution before asking for technical support:

PROBLEM	CAUSES	SOLUTIONS
Can't insert coin	no sample coin	insert sample coin
	sensitivity for coin was adjusted too high	adjust the sensitivity, screw the resistance (turn right)
	the coin mech is bad	replace the coin mech
The flash lights do not light up	the wire of light's control is loose.	check the connection of light's control.
	the light is bad	replace the light.
	the lights drive board failure	maintain or replace the lights drive board
The motor has no movement	the circuit of motor is blocked	check the connection of motor
	the motor-driven inverter fault	reset or maintain the inverter
	the start capacitor of motor is bad	replace the start capacitor of motor
	the motor is bad	replace the motor
Directions control failure	the circuit of direction encoder is blocked	check and connect the circuit of direction encoder
	the encoder is bad	replace the encoder
The monitor has no display	the monitor power line is loose	reconnect the monitor power line
	the monitor signal cable is not connected	connect the monitor signal cable
	the main board is bad	maintain or replace the main board.
	the mointor is bad	replace the monitor
Have no sound.	the wire of speaker is loose.	check the connection of speaker.
	the volume is too low.	adjust the volume on the setting interface.
	the speaker is bad.	check and replace the speaker.
No movement for the whole machine	no AC110V/220V input	check the connection
	Leakage protection switch is off.	please check if there is a short circuit.
	no output voltage of power supply.	repair or replace the power supply.
	the main board is bad.	replace the main board.

12. DIAGRAM FOR MAIN PARTS AND PARTS LIST


12.1 CABINET

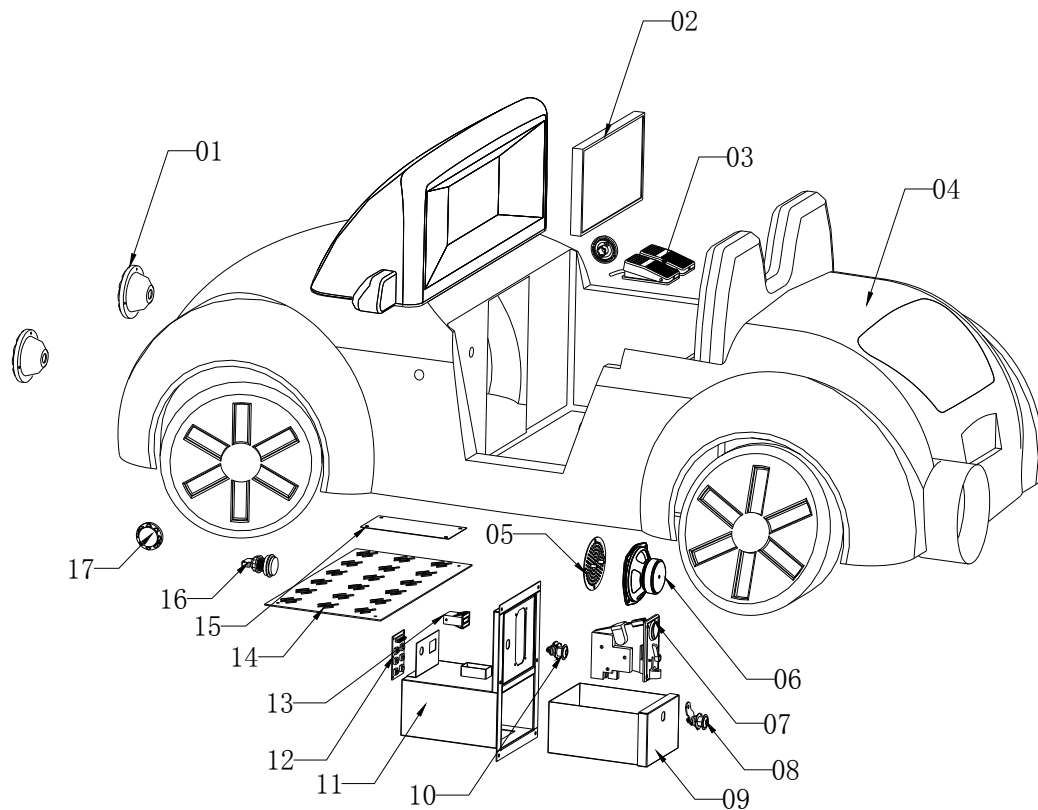

NO.	NAME	QTY.
1	headlamps	2
2	LCD display	1
3	pedal	2
4	fiberglass body	1
5	speaker net	1
6	speaker	1
7	coin mech	1
8	knock 1396	1
9	coin box	1


NO.	NAME	QTY.
10	knock 1285	1
11	coin door component	1
12	setting board	1
13	meter	1
14	pedal	1
15	fiberglass protecting piece	1
16	button with light (middle)	1
17	sides lights	2

12.2 STEERING WHEEL

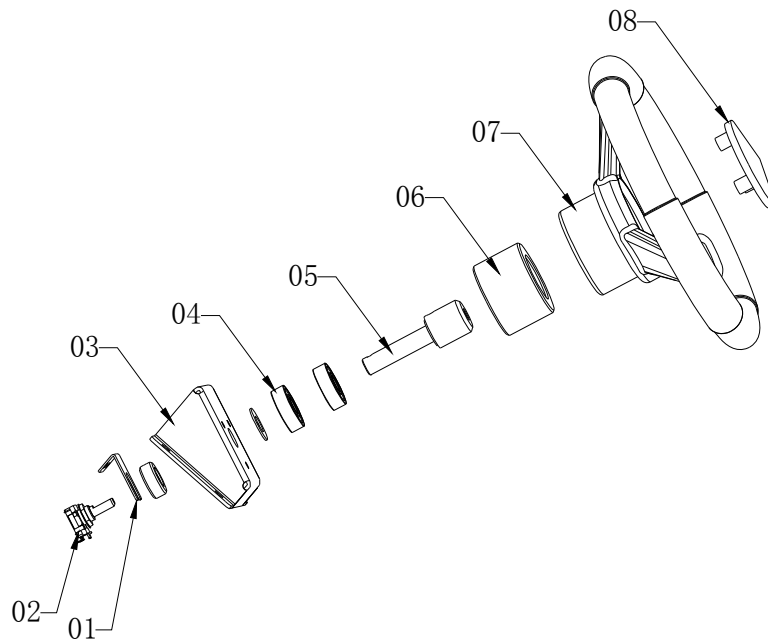


NO.	NAME	QTY.
1	encoder fixture	1
2	encoder	1
3	steering wheel fixture	1
4	bearing	1
5	bearing pole	1
6	bearing cover	1
7	steering wheel	1
8	cover for screw	1

12.3 CIRCUIT BOARD

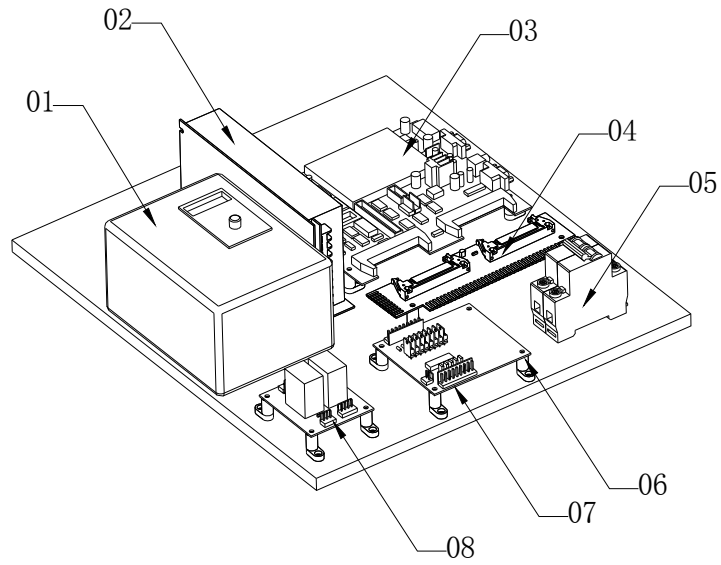

NO.	NAME	QTY.
1	inverter	1
2	power supply box 220V/5V,12V	1
3	main board	1
4	interface board	1
5	leakage protection switch	1
6	PCB pin	16
7	flash light signal amplify board	1
8	relay control board	1

12.4 CHASSIS

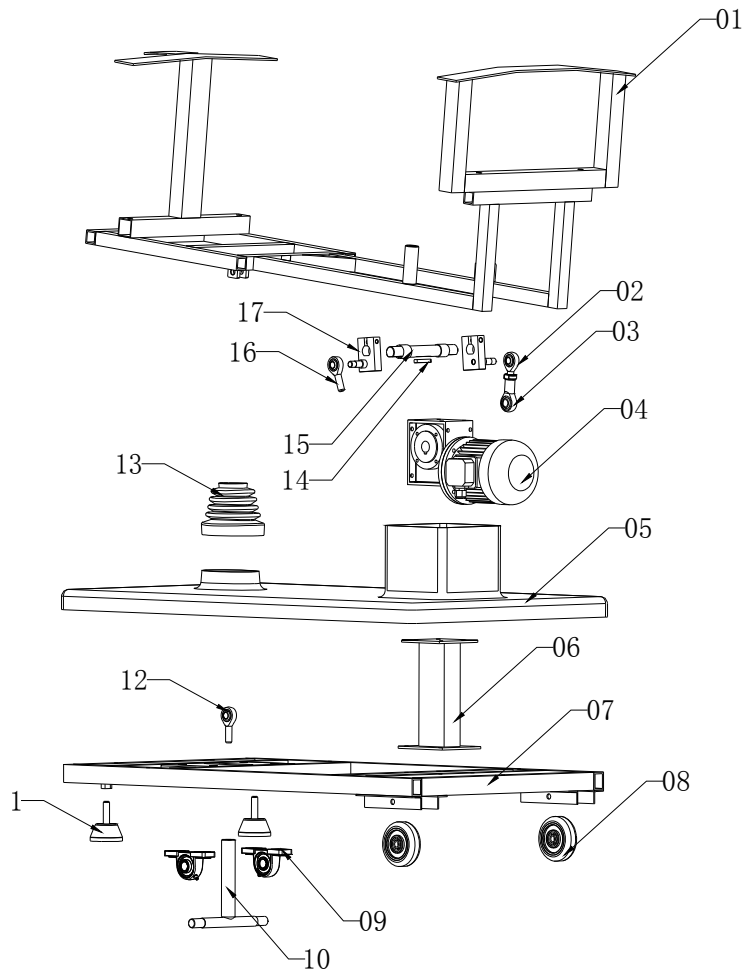

NO.	NAME	QTY.
1	bracket for car	1
2	movable gearing pole 1	1
3	movable gearing pole 2	1
4	motor	1
5	fiberglass for chassis	1
6	bracket for motor	1
7	chassis	1
8	wheel	2
9	bearing	2

NO.	NAME	QTY.
10	front movable pole	1
11	foundation	2
12	movable gearing pole 1	1
13	protecting sleeve for movable pole	1
14	button for motor shaft	1
15	motor shaft	1
16	movable gearing pole 1	1
17	connector for support shaft	2

13. SCHEMATIC DIAGRAM

