

OPERATION MANUAL







1. PLAY INSTRUCTION



2、 SETTING INSTRUCTION

1. Usage adjustment for backstage handle



1、 Up/Down button: Select menu or change data.

2 Enter button: Enter into the select menu or enter into the data revised.

3. Exit button: Back to previous stage or exit for finished revised.

4. Clear button: Delete the last number (use for input data)

5. Set button: Confirm the select number and go on the next number (use for input data)

2. Backstage data setting

(1) Press enter button enter into backstage setting (photo-001). Adjust data setting, account inquiry. (Used backstage handle enter button can enter into backstage setting menu).



(Photo-001)

(2) Press backstage handle enter button enter into data setting (Photo-002), It can adjust coin numbers and rate of sugar. Coin: can adjust 1-4 coins. Rate of sugar: can adjust $1.5 \\ 2 \\ 2.5 \\ 3.$ Press up / down button can adjust the data, after finished setting press exit button for exit.



(Photo-002)

3.Account Menu

Enter into account menu (Photo-003) to check coins and rate of sugar.



(Photo-003)

If clear the account, use backstage handle clear button enter into below menu, (Photo-003), confirm to clear press setting button, cancel press exit button.



(Photo-003-1)



3 C Board Connecting Instruction

1. Main board connection instruction

Plug 1 connect to power。 (Place J1)。

Plug 2 connect to motor for sugar。 (Place J8)。

Plug 3 connect to board (6pin FFC Photo 001) (Place J7) 。

Plug 4 (Reserved) 。 (Place J14) 。

Plug 5 (Reserved) 。 (Place J15) 。

Plug 6 connect to monitor board (Place J4) .

Plug 7 connect to audio (Sound) (Place P17) .

Plug 8 connect to USB。 (Place USB1)。

Plug 9 connect to coin acceptor, access list, reflection detection(Photo

002) (Place J9) 。

Plug 10 connect to control button。 (Start button) (Place J5)。

Plug 11 connect to backstage handle (Place J6) .

Note: Number 1-11 is for above main board connection diagram. Red letter is for PCB plug number.

2. Board



(Photo 004)

3. Detection Bar



(Photo 005)

4. Error Code & Trouble Shooting

NO.	Error code	Failure
ERROR	00	Main host data wrong
ERROR	01	Sugar failure (Less 1)
ERROR	02	Sugar failure (Less 2)
ERROR	03	Sugar failure (Less 3)
ERROR	04	Sugar failure (Less 4)
ERROR	05	Motor error
ERROR	06	Setting data wrong
ERROR	07	Coin acceptor failure
ERROR	08	Prize out detection failure
ERROR	09	Clear/Electric check value over 80,000